



Schematic of a Dynamometer test incorporating a particle counter

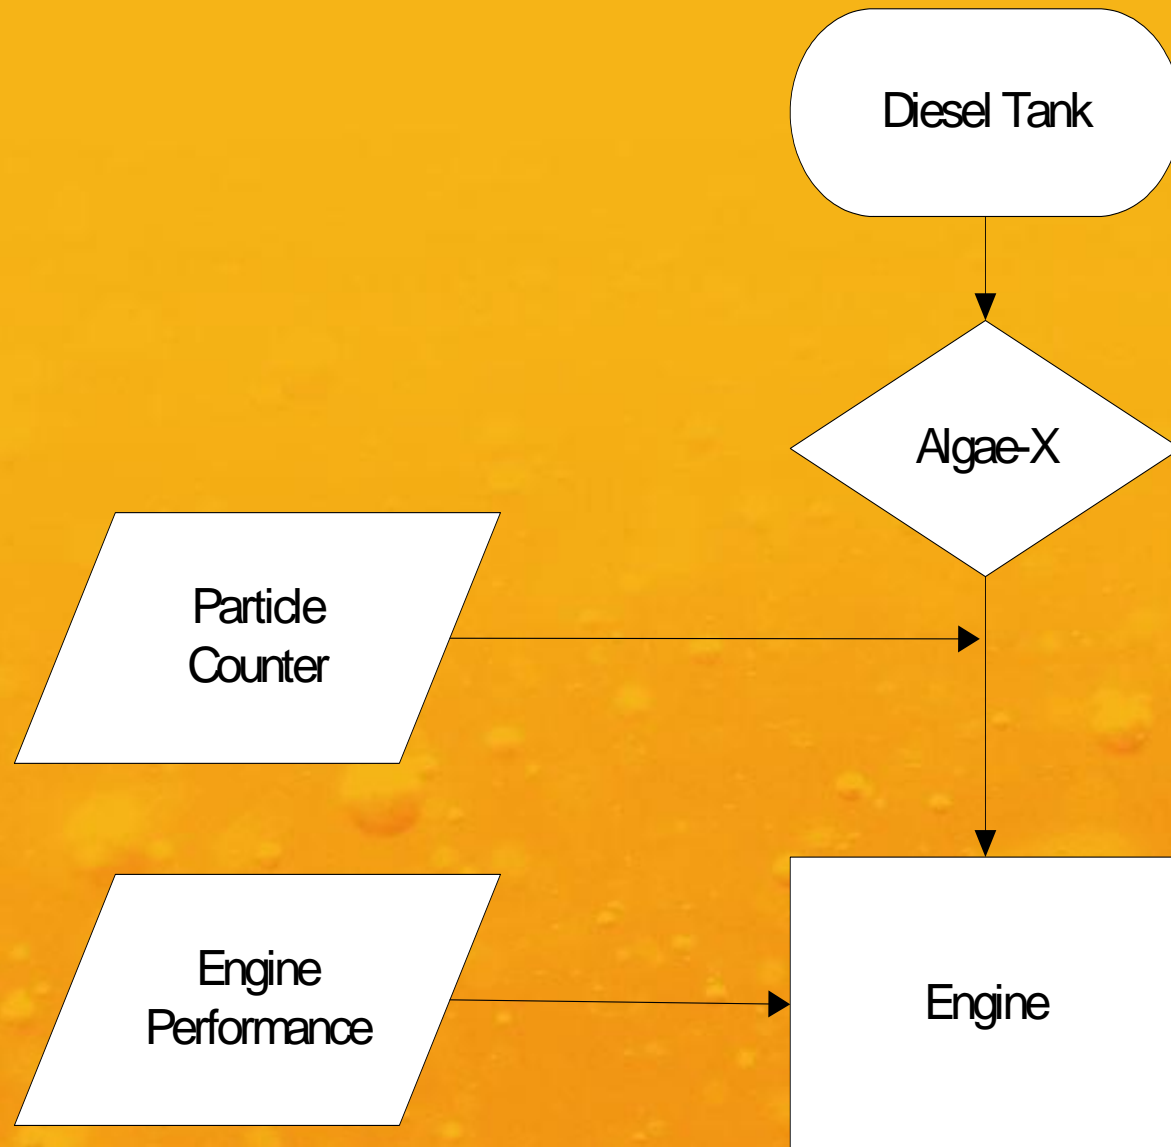

Fuel Cleanliness & Particle Count Distribution

	2 μm	5 μm	15 μm	25 μm
Sample 1	144990 \rightarrow 72045	11193 \rightarrow 2463	596 \rightarrow 56	56 \rightarrow 22
Sample 2	87277 \rightarrow 55991	5996 \rightarrow 2058	258 \rightarrow 22	0 \rightarrow 0
	Without Algae-X \rightarrow With Algae-X			

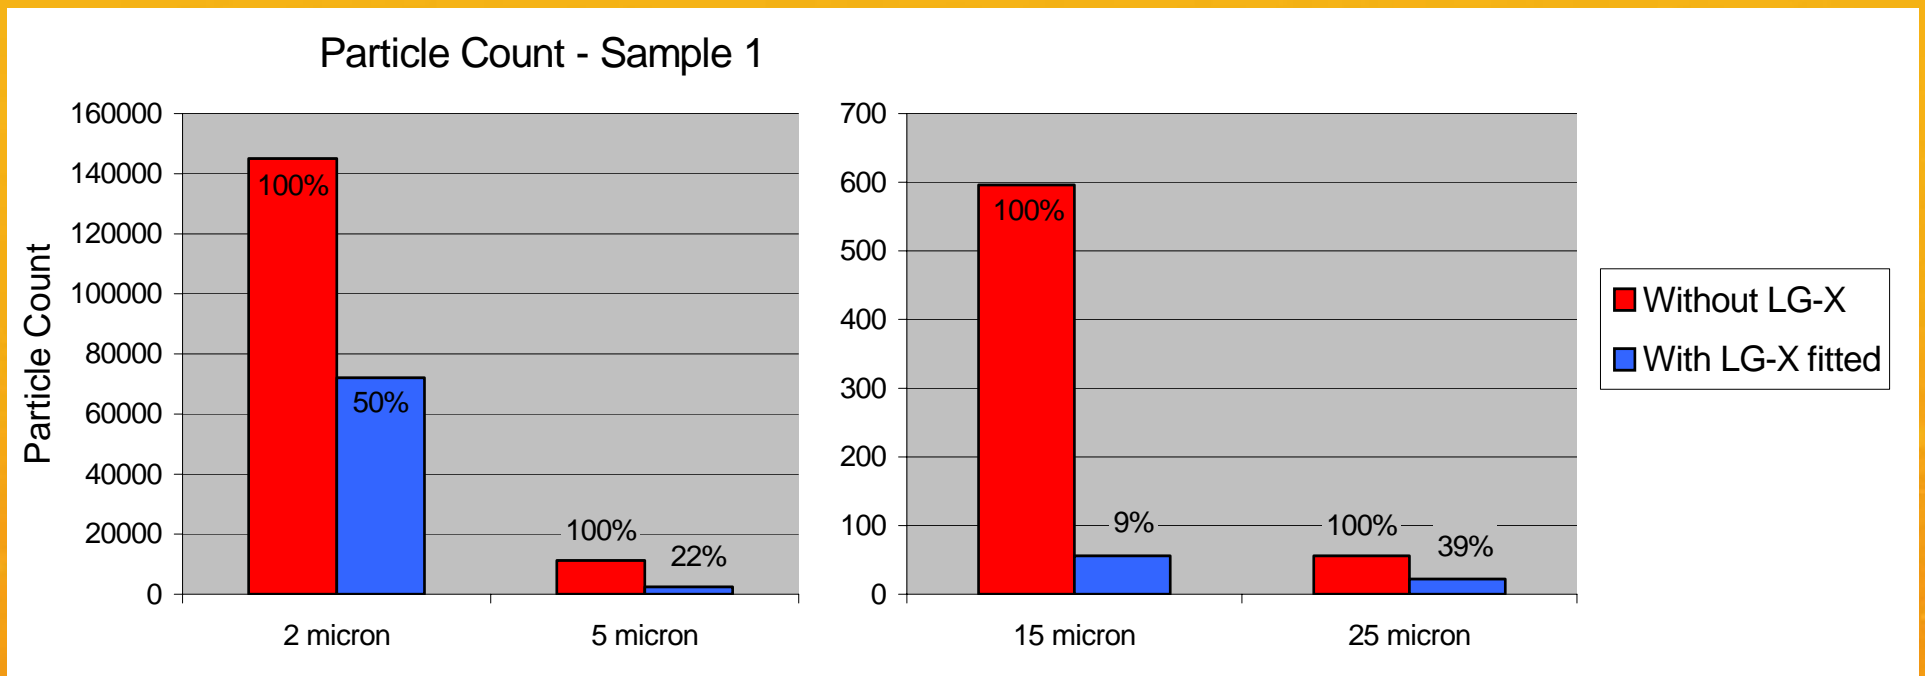

Particle Size	2 micron	5 micron	15 micron	25 micron
Avg. Reduction	43%	72%	91%	61%